

2.3 **Ribbon Connectors** : Take the ribbon cable between the thumb and fore-finger and push the cable into the connector socket.

2.4 **Cartridge Flap** : It is possible that the clear polycarbonate plastic flap becomes disengaged from the case. Replace by first inserting the right-hand switch operator end into the slot provided and then bend the left-hand lug inwards until it is possible to press it home.